

1

Place both, Usb Programmer and Superior Remote, on a table. The flashing led of Usb Programmer should be aligned to "Mute" Key of Remote Control, approximately 1,5 cm away.

**2**

Make sure Usb-Programmer and Superior Remote are on the same level.

tips and tricks



Never use usb-hub (multi-usb) to connect Usb-Programmer to your PC.



Always connect the Usb-Programmer directly to the usb port of your PC.