

General safety warning signs and instructions



General warnings, please observe the following instructions!

WARNING



Warning, crushing hazard!



Warning, sharp object!



Warning of hot surfaces!



Warning of flammable substances / fire hazard warning



Read the operating instructions for your device and the enclosed safety instructions carefully!



Always disconnect your device from the power source before carrying out repair work!



Always wear suitable protective gloves!

Safety instructions

Cooker

CAUTION FOR COOKING APPLIANCES WITH GAS CONNECTION

Special item that may only be installed by an authorised specialist/installer. Caution:

- Danger to life if incorrectly connected!

IMPORTANT

These are only exemplary illustrations, please always refer to the operating instructions for your device!

All safety instructions describe in detail the potential risks they address and contain precise instructions on how to avoid injury, damage to property or electric shock as a result of improper handling. Please observe the following guidelines:



WARNING

1. Disconnect the appliance from the power supply before carrying out the procedures described.
2. Use protective gloves before starting work.
3. Only carry out the described procedures when the appliance is cold.



- Always disconnect the appliance from the power source before carrying out installation work.
- Installation and repairs should be carried out by qualified specialists in accordance with the manufacturer's instructions and the applicable local safety regulations. Therefore, only carry out repairs or replace parts yourself if this is expressly provided for in the user manual.



- Only use certified spare parts, in case of doubt original spare parts
- Do not touch accessories and spare parts with wet hands.
- Use by children and persons with limited abilities: Adults with reduced physical, sensory or mental capabilities and persons with no experience or knowledge of the appliance may only use it if they are either supervised or have received comprehensive instruction in its safe use and understand the potential hazards.



- Children must be supervised to ensure that they do not play with accessories or spare parts.



- Danger from hot surfaces: The accessible parts of the oven can become very hot during operation. Keep children away and prevent them from using the appliance as a toy.



- Risk of burns: Avoid contact during and immediately after use. Allow the appliance to cool down completely before starting repair work.
- Heating elements and risk of burns: Both the appliance and its accessible parts become very hot during use. Heating elements should not be touched.
- Always wear work gloves for all installation and maintenance work.

- Heating elements and risk of burns: Both the appliance and its accessible parts become very hot during use. Heating elements should not be touched.
- Read all instructions carefully to avoid improper use and the associated risk of injury.
- Keep packaging material out of the reach of children: Children could wrap themselves in packaging materials such as plastic bags or foil or pull them over their heads, which could lead to suffocation. Therefore, make sure that packaging materials are kept out of the reach of children.

Removing and installing the oven door

REMOVING THE OVEN DOOR

To remove the door:

1. Open the oven door completely.
2. Pull the locking hooks of the door hinges completely forwards (see figure 1).
3. Close the door slowly until it engages in an intermediate stop (position A). Then carefully lift the door (B) and turn it slightly (C) until it releases from the hinges (D) (see figure 2).

INSERTING THE OVEN DOOR

To refit the door:

1. Insert the hinges into the corresponding recesses.
2. Open the oven door completely.
3. Slide the locking hooks of the hinges back into their original position.
4. Close the door carefully.

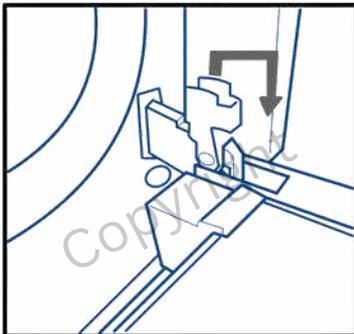


Figure 1

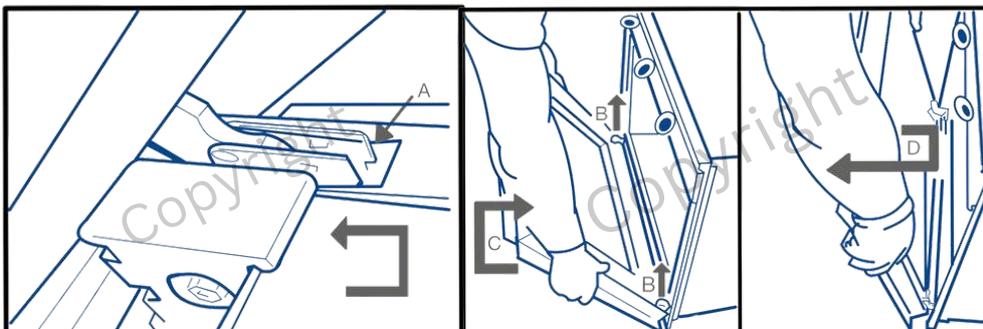


figure 2

REPLACING THE OVEN LIGHT BULB

Rear lighting (if available):

1. Disconnect the oven from the power supply.
2. Unscrew the lamp cover (see figure 3). Replace the defective light bulb with a new one of the same type (see type information below) and screw the cover back on.
3. Reconnect the oven to the power supply.

Side lighting (if available):


1. Also disconnect the oven from the power supply.
2. If there are side grids, remove them.
3. Carefully lever out the lamp cover using a slotted screwdriver.
4. Replace the light bulb with a new one (see type information below).
5. Replace the lamp cover and press it firmly against the wall of the oven until it clicks into place.
6. Refit the side grids.



figure 3


DOOR SEAL REPLACEMENT

1. Loosen the clamps that secure the seal (C).
2. Remove the seal
3. Now insert the new seal and click the clamps back into place.

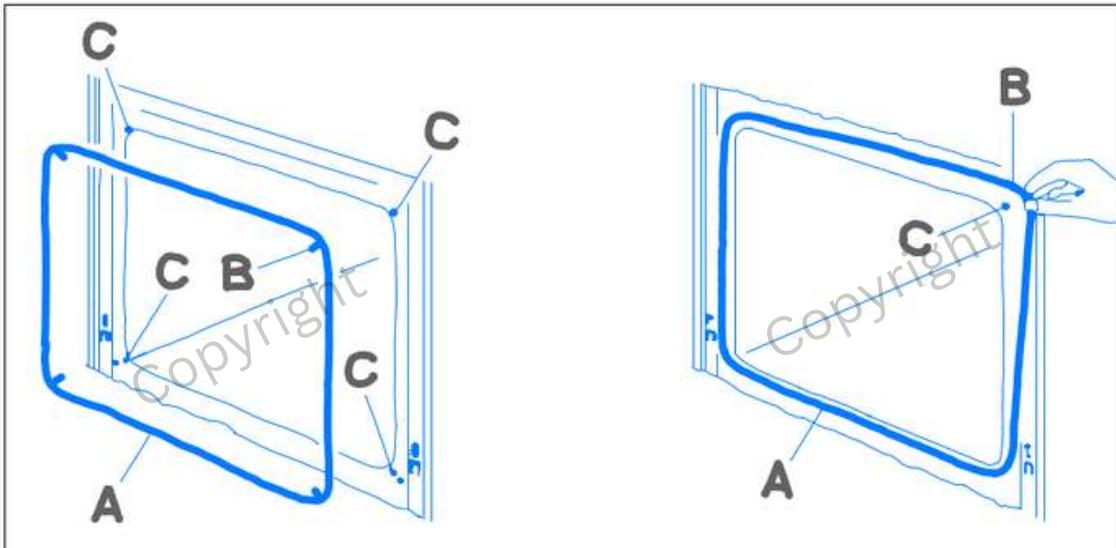

Replacing the glass ceramic plate

1. Loosen the screws and lever out the clips that hold the glass ceramic surface in place.
2. Carefully lift the hob once all the screws have been removed.
3. After removing the hob, remove all glass splinters.
4. Place the new glass ceramic surface in position and secure it by tightening the screws again.

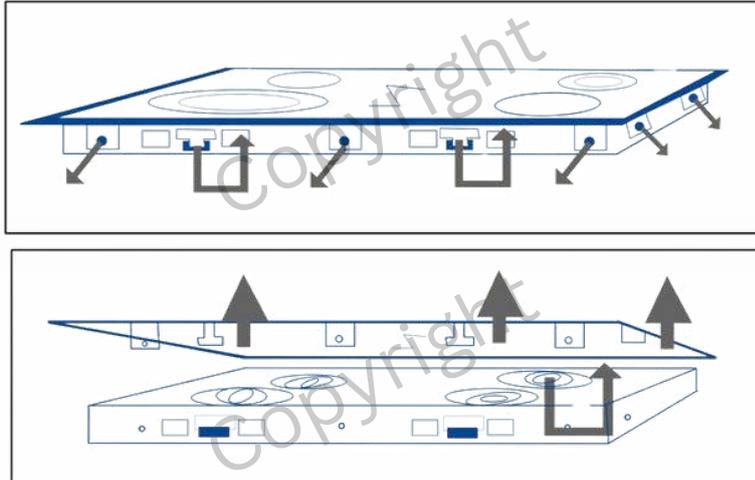

Replacement radiant heater

1. Loosen the screws and lever out the clips that hold the glass ceramic surface in place.
2. Carefully lift the hob once all the screws have been removed.
3. After removing the hob, remove the defective radiant heating element.
4. Place the new radiant heating element and secure the glass ceramic plate on the hob by retightening the screws.

